## Lichtlauf

# eNormaJeane double

#### product description

Design Christoph Matthias and Veit Redl 2015

Aluminium, leaf plated with copper and colour coated. A pendant lamp like a cloth in the upwind. Powerful, soft light downwards. Each luminaire is individually shaped.

light sources: 2 or 3 x LED approx. 12 W, light colour warm white dimensions: approx. 125 x 30 x 17 cm (2 LEDs) or approx. 160 x 40 x 17 cm (3 LEDs)

Each lamp is handcrafted and has its unique shape. Due to the manual production process surface irragularities might occure. This is not a reason for a complaint.

#### enclosed

eNormaJeane double canopy with LED control gear 2 or 3 adjusting ring 4 or 6 ferrules shrinking tube sections

### technical data

230V  $\sim$  50Hz 2 or 3 x 12W LED, max. 350mA

⊕ CE 滾 ֎

Art: Indoor light IP20

This luminaire contains built-in LED lamps. Energy class: E The lamps can be replaced only by the manufacturer.

#### safety note

Follow always the hints of this instruction for a safe assembly and use of these lights. Keep the assembly instruction for further questions.

The assembly and the electric supply must The lamp change m be done by an electric professional. Local in- tent professional. stallation regulations have to be respected.

The manufacturer accepts no liability for any damage due to improper use of the luminaire.

Attention! Before working on the luminaire disconnect it from the mains. Also for cleaning, maintance and lamp change.

Luminares are only allowed to be used for the specified purpose. Interior lights may not be used in outside area. Luminares may not be covered.

They may not be connected to power supply still they are packaged.

Lights with elctronic control gears (ECG) have to be operated with original ECGs.

The lamp change must be done by an competent professional.

Use only lamps with same type of construction, performance and voltage.

In case of damages, in particular of cable and socket, the luminare have to be shut off immediately. In case of damage on the mains cable it has to be changed by the Lichtlauf GmbH.

For malfunction call autorized personnel for troubleshooting.

Never repair it by yourself.

Through improper repair work may arise risk for the user.

Elements of plug and connection shall be free from traction and torque.

#### care instructions

Disconnect the device from the power supply grid before cleaning.

The care of the lamp is limited to the surfaces. Make sure no liquid reaches the connection area or electrical components.

#### Important:

Please don't use spiritus or alcohol containing products.

As well as no abrasives or abrasive containig detergents.

It is sufficient to clean the surface using a soft, dry cloth.

Do not use pressure while cleaning, otherwise you might cause damage on the gilded surface.

#### special notes


Keep plastic bags and small components away from children to avoid risks of suffocation or swallowing!


Do not look directly into the light source! (risk of glare or eye damage)

Caution: Risk of injury due to sharp corners.

#### assembly


Before you start mounting and connecting the luminaire, make sure that the supply cable is disconnected from the mains! Remove the fuse!

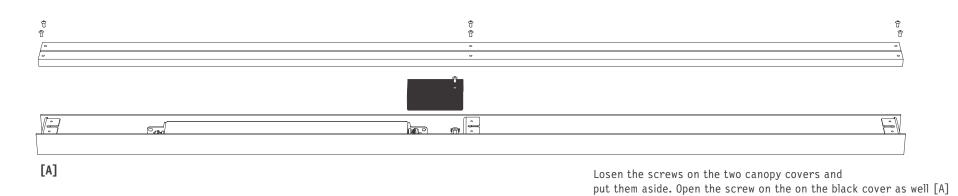


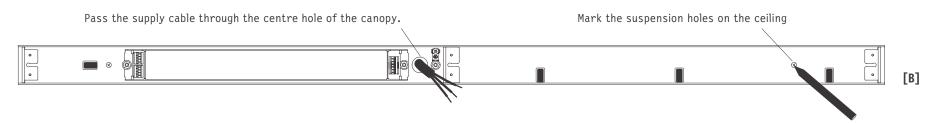


Mount the canopy with adequate fixing material.







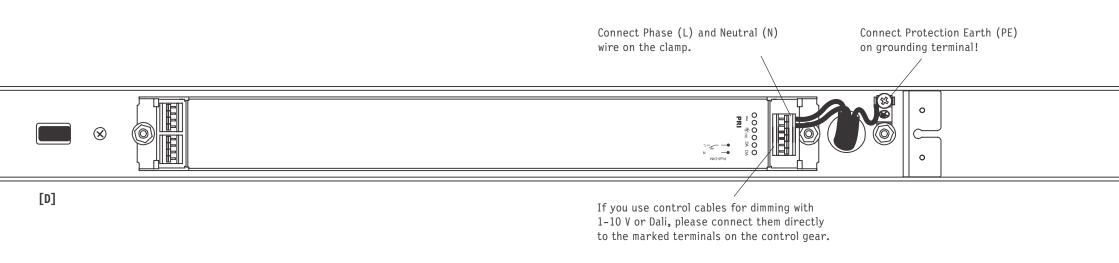


Make sure that the stripped wires are firmly seated in the terminals!

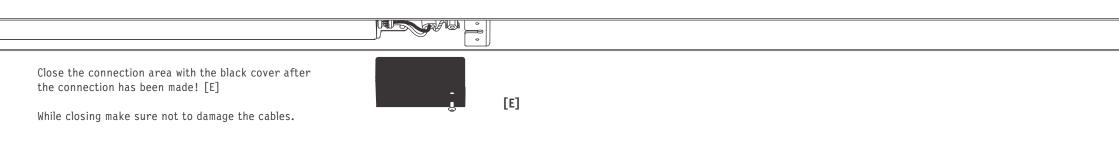

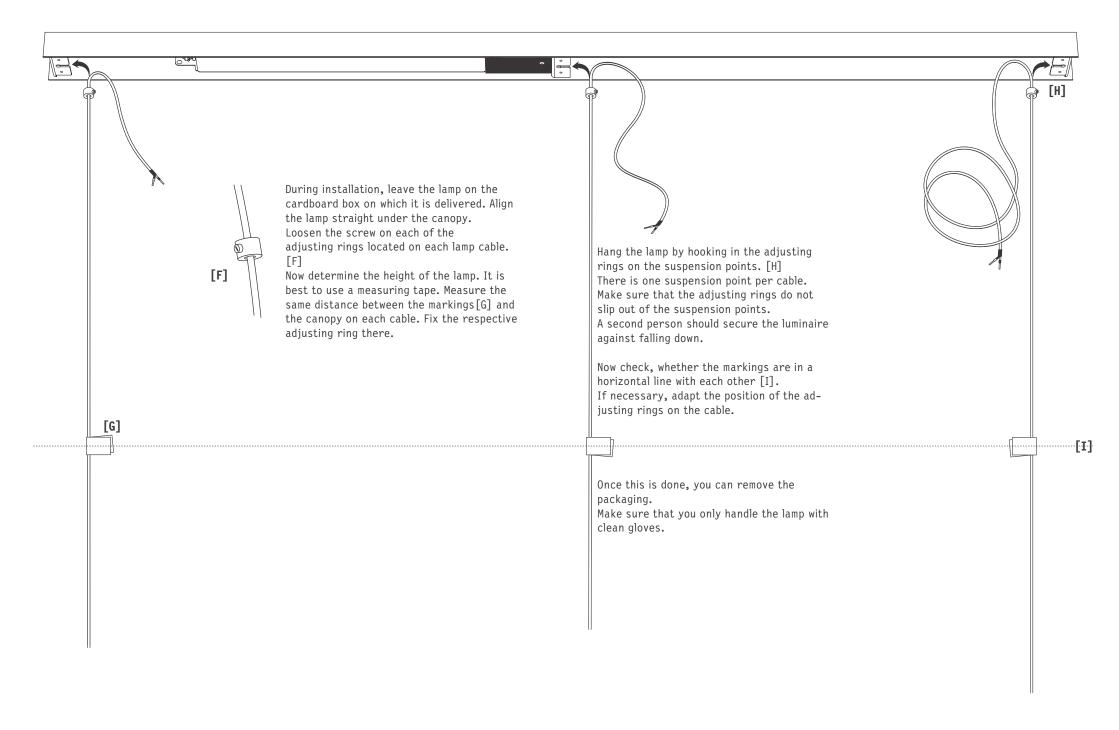

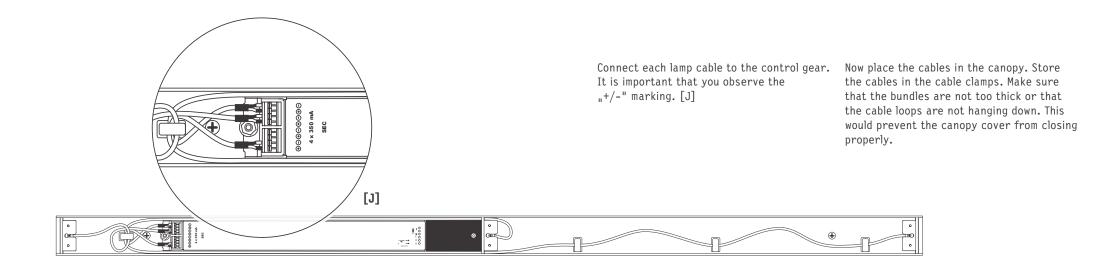

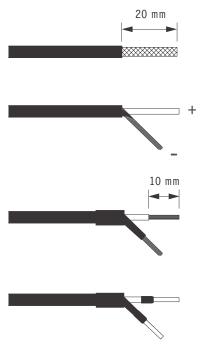


If the cables are too long to place them in the canopy, you can shorten them.


Following this assemble the lamp cables according to the drawing.  $\cable{f}\cable$ 


Remove approximately 20 mm of the outer sheath. Please be careful! The coaxial braid must not be damaged.

Then twist the coaxial braid into a conductor (-). Provide the negative conductor with a piece of shrinking tube. Then put a larger shrinking tube over the place where the two conductors share. Insulate both conductors by approx. 10 mm.

Finally squeeze the conductors with one ferrule each.

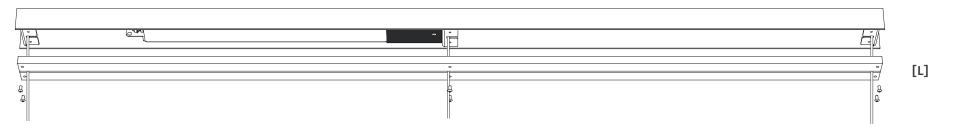



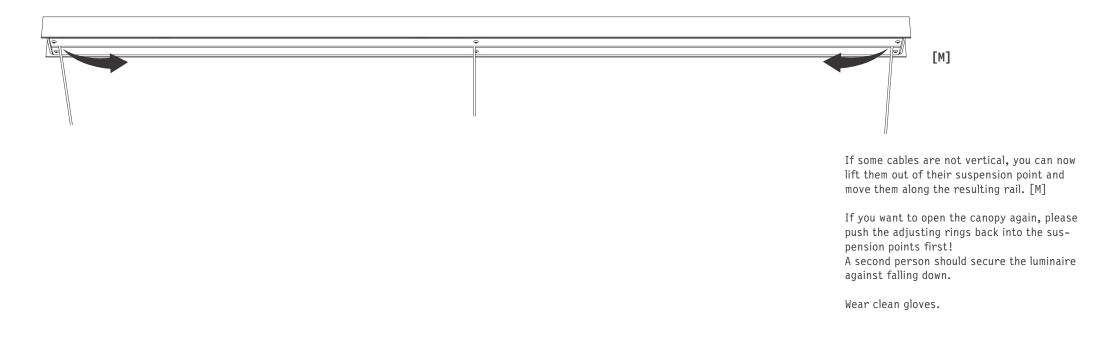

#### Lichtlauf GmbH

Sonnentaustraße 12 80995 München

T +49(0)89.30905274-0 F +49(0)89.30905274-9

info@lichtlauf.de
www.lichtlauf.de